

Välj Bogpropeller från Lewmar

LEWMAR®

Steg 1


Välj bogpropeller och säkring. Du behöver också säkringshållare.



Segelbåt	Motorbåt	Modell	Effekt		Ström	Art.Nr	Säkring	Art.Nr
20-30 fot	20-28 fot	140TT	2,0kW	2,7hp	12v	L591402	200Amp	L589012
28-35 fot	25-30 fot	140TT	2,2kW	3,0hp	12v	L591401	200Amp	L589012
32-37 fot	30-35 fot	185TT	3,0kW	4,0hp	12v	L591801	250Amp	L589008
					24v	L591802	130Amp	L589007
35-40 fot	33-40 fot	185TT	4,0kW	5,4hp	12v	L591807	400Amp	L589010
					24v	L591808	250Amp	L589008
38-45 fot	36-43 fot	185TT	5,0kW	6,7hp	12v	L591803	400Amp	L589010
					24v	L591804	250Amp	L589008
43-50 fot	40-50 fot	185TT	6,0kW	8,0hp	12v	L591805	500Amp	L589011
					24v	L591806	325Amp	L589009
48-57 fot	45-55 fot	250TT	8,0kW	10,8hp	24v	L592501	400Amp	L589010

Steg 2

Välj längd på röret genom bogen eller monteringskassett för aktermontage

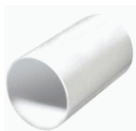

Modell	750mm	1000mm	1500mm	2000mm	Aktermontage
140TT	L589101	L589102	L589103		L589110
185TT	L589300	L589301	L589302	L589303	L589310
250TT		L589501	L589502	L589503	L589510

Steg 3

Välj kontrollenhet. Till 140TT 2,0kW fungerar endast L589094

Kontroll	Artikelnummer
Touchpanel	L589001
Joystick	L589002
Joystick dubbel	L589004
Joystick låsbar	L589094



Steg 4

Välj längd på kontrollkablaget



Benämning	Artikelnummer
Kontrollkabel 2m	L589015
Kontrollkabel 7m	L589016
Kontrollkabel 10m	L589017
Kontrollkabel 14m	L589018
Kontrollkabel 18m	L589019
Kontrollkabel 22m	L589020
Y-kabel	L589025